

**TRITON**

**T30i  
electric  
handwash**



**Installation and  
operating  
instructions**

INSTALLERS PLEASE NOTE THESE INSTRUCTIONS  
ARE TO BE LEFT WITH THE USER



**IMPORTANT SAFETY ADVICE**

- The handwash unit **MUST BE** switched off at the isolating switch when not in use. This is a safety procedure recommended for all electrical appliances.
- The shower arm supplied with this product is an integral part of the safety of your handwash. Failure to use genuine Triton parts may cause injury and invalidate your guarantee.



## **PLEASE READ THIS IMPORTANT SAFETY INFORMATION**

Products manufactured by Triton are safe and without risk provided they are installed, used and maintained in good working order in accordance with our instructions and recommendations.

- ⚠ WARNING: DO NOT** operate handwash if frozen, or suspected of being frozen. It must thaw out before using.
- ⚠ DO NOT** operate the unit if the spray arm becomes damaged.
- ⚠ DO NOT** restrict flow out of the spray arm by placing arm in direct contact with your body.
- ⚠ DO NOT** operate the unit if water ceases to flow during use or if water has entered inside the unit because of an incorrectly fitted cover.
- ⚠ WARNING: If restarting the handwash immediately after stopping, be aware that a slug of hot water will be expelled for the first few seconds.**
- ⚠** The spray head and rings must be descaled regularly.
- ⚠** Fit only spray heads recommended by the manufacturer and never fit any additional device to restrict the water outlet flow.
- ⚠** The outlet must not be connected to any tap or fitting other than those specified.
- ⚠** This appliance is intended to be permanently connected to the water mains and not connected by a hose set.

Mains water pressure only.

Minimum inlet pressure 100kPa (1 bar) 150kPa (1.5 bar) for 10.5kW

Maximum inlet pressure 1000kPa (10 bar)

**This book contains all the necessary fitting and operating instructions for your handwash.**

**Care taken during the installation will provide a long, trouble-free life from your handwash.**

### **⚠ WARNING ⚠**

This appliance can be used by children aged from 3 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children may not play with the appliance. Cleaning and user maintenance shall not be made by children.



## IMPORTANT - PLEASE READ THESE GENERAL GUIDANCE NOTES BEFORE PROCEEDING



### 1 GENERAL

- 1.1** Isolate the electrical and water supplies before removing the cover.
- 1.2** Read all of these instructions and retain them for later use.
- 1.3** **DO NOT** take risks with plumbing or electrical equipment.
- 1.4** Isolate electrical and water supplies before proceeding with the installation.
- 1.5** The unit must be mounted onto the finished wall surface (on top of the tiles). **DO NOT** tile up to or seal around **ANY PART** of the unit using silicone sealer after fixing to the wall. Special care must be taken **NOT TO BLOCK OR SEAL ANY PRD VENTS ON THE UNIT**.
- 1.6** Contact Customer Service (*see back page*), if any of the following occur:
  - a)** *If it is intended to operate the shower at pressures above the maximum or below the minimum stated.*
  - b)** *If the unit shows a distinct change in performance.*
  - c)** *If the shower is frozen.*
- 1.7** If it is intended to operate the shower in areas of hard water (above 200 ppm temporary hardness), a scale inhibitor may have to be fitted. For advice on the Scale Inhibitor, contact Customer Service.
- 1.8** The showerhead must be cleaned regularly with descalant to remove scale and debris, otherwise restrictions to the flow on the outlet of the unit will result in higher temperatures and could also cause the (PRD) Pressure Relief Device in the unit to operate.
- 1.9** This product is not suitable for mounting into steam rooms or steam cubicles.

### 2 PLUMBING

- 2.1** The plumbing installation must comply with Water Regulations, Building Regulations or any particular regulations as specified by Local Water Company or Water Undertakers and should be in accordance with BS EN 806.
- 2.2** The supply pipe must be flushed to clear debris before connecting to the shower unit.

- 2.3** **DO NOT** solder pipes or fittings within 300mm of the shower unit, as heat can transfer along the pipework and damage components.
- 2.4** **DO NOT** fit any form of outlet flow control as the outlet acts as a vent for the heater can.
- 2.5** **DO NOT** use excessive force when making connections to the flexible hose or showerhead, finger tight is sufficient.
- 2.6** All plumbing connections must be completed before making the electrical connections.
- 2.7** This appliance **MUST NOT** be connected to the inlet supply by a hose-set.

### 3 ELECTRICAL

- 3.1** The installation must comply with BS 7671 'Requirements for electrical installations' (IEE wiring regulations), building regulations or any particular regulations as specified by the local Electrical Supply Company.
- 3.2** This appliance **MUST** be earthed.
- 3.3** In accordance with 'The Plugs and Sockets etc. (Safety) Regulations 1994', this appliance is intended to be permanently connected to the fixed wiring of the electrical mains system.
- 3.4** Make sure all electrical connections are tight to prevent overheating.
- 3.5** A 30mA residual current device (RCD) **MUST** be installed in all UK electric and pumped shower circuits. This may be part of the consumer unit or a separate unit.
- 3.6** Switch off immediately at isolating switch if water ceases to flow during use.
- 3.7** Other electrical equipment i.e. extractor fans, pumps must not be connected to the circuits within the unit.
- 3.8** Switch off at isolating switch when not in use. This is a safety procedure recommended with all electrical appliances.

- 3.9** As with all electrical appliances it is recommended to have the shower and installation checked at least every two years by a competent electrician to ensure there is no deterioration due to age and usage.

The installation must be carried out by a suitably qualified person and in the sequence of this instruction book.

## SPECIFICATIONS

### Electrical

Nominal power rating at 240V	Nominal power rating at 230V
3kW – 13A	2.7kW – 13A
7kW – 30A	6.5kW – 30A

### Water

Inlet connection – 15mm diameter.

Outlet connection – ½" BSP male thread.

### Entry Points

Water – Right: bottom.

Cable – Right: bottom, middle back, top.

### Materials

Backplate, cover, control knobs – ABS.

Elements – Minerally insulated corrosion resistant metal sheathing.

### Dimensions

Height – 173 mm

Width – 200 mm

Depth – 108 mm

### Standards and Approvals

Splashproof rating IPX4.

Complies with the requirements of current British and European safety standards for household and similar electrical appliances.

Complies with requirements of the British Electrotechnical Approvals Board (BEAB).

Meets with Compliance with European Community Directives (CE).

## ADVICE TO USERS

The following points will help you understand how the handwash operates:

- a. The electric heating elements operate at a constant rate. It is the flow rate of the water passing through the heater can which determines the water temperature at any given setting. The slower the flow, the hotter the water becomes and the faster the flow, the cooler the water.
- b. During winter, mains water supply will be cooler than in summer. Therefore the water temperature of the unit will vary between seasons on any one setting of the temperature control, e.g. if you have chosen setting number 6 as your preferred handwash temperature in the summer, you may have to increase that number during winter by adjusting the temperature control anti-clockwise, which in effect slows the water flow.
- c. The stabiliser valve minimises variations in water temperature during mains water pressure changes. If changes in water temperature are experienced during normal use, it will most likely be caused by the water pressure falling near to or below the minimum level. The drop in pressure may be due to water being drawn off at other points whilst the unit is in use. If the pressure drops appreciably below the minimum, the heating elements will automatically cut out.

DO NOT place items such as soap or shampoo bottles on top of the unit. Liquid could seep through the joint between the cover and backplate, and possibly damage the sealing rubber.

If water becomes too hot and you cannot obtain cooler water, first check that the sprayhead is not blocked.

**CONTENTS****Page**

INTRODUCTION	
IMPORTANT SAFETY INFORMATION & GENERAL GUIDANCE NOTES ( <i>please read</i> )	
GENERAL ADVICE TO USERS	
Specifications and advice to users.....	4
Key to main components .....	6
Electrical requirements.....	7 – 8
Water requirements .....	
Siting of the unit .....	7
Fitting the unit to the wall.....	8 – 9
Plumbing connections.....	10
Electrical connections .....	11
Replacing the cover.....	12
Swivel arm fitting .....	12
Commissioning.....	13
Operating the unit.....	14
Operating functions.....	15
Cleaning.....	16
Spare parts .....	17
Fault finding .....	18 – 19
Water/Cable entry points diagram.....	20
Guarantee, service policy, etc. ....	rear cover


<b>PRODUCT FICHE</b>		
<b>Model</b>	3.0kW	7.0kW
<b>Load Profile</b>	XXS	XXS
<b>Energy Efficiency Class</b>	A	A
<b>Energy Efficiency (%)</b>	39	39
<b>Annual Electricity Consumption (kwh)</b>	490	526
<b>Sound Power Level (db)</b>	15	15

To check the product suitability for commercial and multiple installations, please contact Triton's specification advisory service before installation. Please see back of book for contact information.

## KEY TO MAIN COMPONENTS

Fig.1

NOTE: Not all wiring shown for reasons of clarity

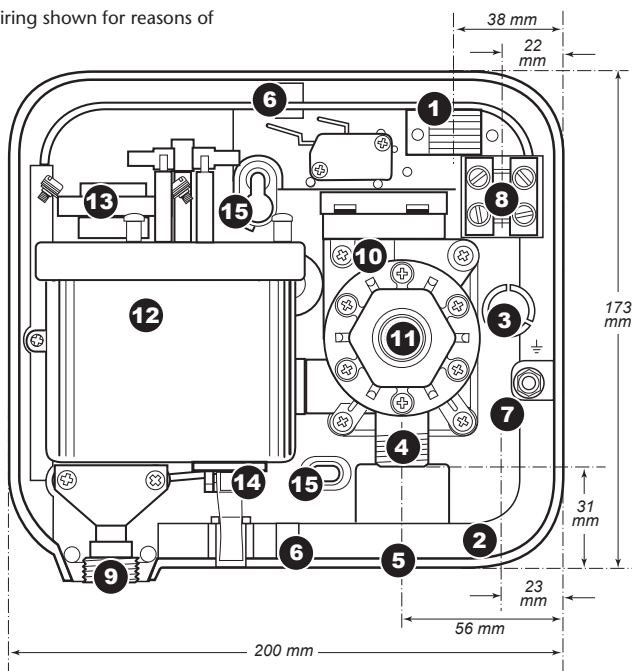**Inside unit – fig.1**

1. Top cable entry
2. Bottom cable entry
3. Rear cable entry
4. Water inlet
5. Pipe entry
6. Cover screw fixing
7. Earth connection
8. Terminal block
9. Outlet pipe
10. Pressure switch
11. Stabilising valve
12. Can and element assembly
13. Thermal cut-out
14. Pressure relief device (PRD)
15. Wall screw fixings

**Pack Contents**

Handwash unit  
 200mm swivel arm  
 Instructions, guarantee, etc.

## ELECTRICAL REQUIREMENTS


### WARNING! THIS APPLIANCE MUST BE EARTHED

The installation, supply cable and circuit protection must conform with BS7671 (IEE wiring regulations) and be sufficient for the amperage required.

The following notes are for guidance only:


- 1** The unit must only be connected to a 230 - 240V ac supply.
- 1.1** The electrical rating of the unit is shown on the rating label (fig.2) within the unit.
- 2** Before making any sort of electrical connection within the installation, make sure that no terminal is live. If in any doubt, switch off the whole installation at the consumer unit.
- 3** The 7kW rated handwash must be connected to its own independent electrical circuit. IT MUST NOT be connected to a ring main, spur, socket outlet, lighting circuit or cooker circuit.  
The 3kW rated handwash can be connected to a ring main via a 13A fused spur.
- 3.1** The electrical supply must be adequate for the loading of the unit and existing circuits.
- 4** Check your consumer unit (main fuse box) has a main switch rating of 80A or above and that it has a spare fuse way which will take the fuse or miniature circuit breaker (MCB) necessary for the handwash (fig.3).
- 4.1** If your consumer unit has a rating below 80A or if there is no spare fuse way, then the installation will not be straight forward and may require a new consumer unit serving the house or just the handwash/shower.
- 5** For close circuit protection DO NOT use a rewirable fuse. Instead use a suitably rated MCB or cartridge fuse (**see table A**).
- 5.1** A 30mA residual current device (RCD) must be installed in all UK electric circuits. This may be part of the consumer unit or a separate unit.

- 6** A 45 amp double pole isolating switch with a minimum contact gap of 3 mm in both poles must be incorporated in the circuit.
- 6.1** It must have a mechanical indicator showing when the switch is in the OFF position, and the wiring must be connected to the switch without the use of a plug or socket outlet.

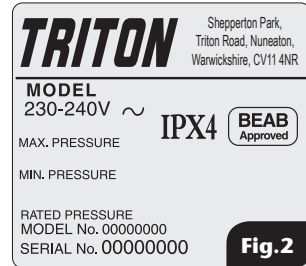

**Fig.2**

**Fig.3** schematic of installation circuit  
(7kW unit only)

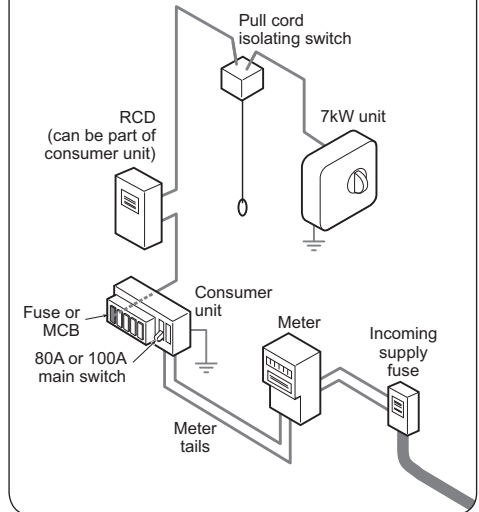

- 6.2** The switch must be accessible and clearly identifiable, but out of reach of a person using the unit.
- 7** Where shower cubicles are located in any rooms other than bathrooms, all socket outlets in those rooms must be protected by a 30mA RCD.
- 8** The current carrying capacity of the cable must be at least that of the handwash unit circuit protection (**see table B**).
- 8.1** To obtain full advantage of the power provided by the handwash, use the shortest cable route possible from the consumer unit to the handwash.
- 8.2** It is also necessary to satisfy the disconnection time and thermal constraints which mean that for any given combination of current demand, voltage drop and cable size, there is a maximum permissible circuit length.
- 9** The handwash circuit should be separated from other circuits by at least twice the diameter of the cable or conduit.
- 9.1** The current rating will be reduced if the cabling is bunched with others, surrounded by thermal loft or wall insulation or placed in areas where the ambient temperature is above 30°C. Under these conditions, derating factors apply and it is necessary to select a larger cable size.
- 9.2** In any event, it is essential that individual site conditions are assessed by a competent electrician in order to determine correct cable size and permissible circuit length.


**Table A**

<b>CIRCUIT PROTECTION</b>		
<b>unit rating</b>	<b>MCB</b>	<b>cartridge fuse</b>
3.0kW	–	13A
7.0kW	30/32A	30A

**Table B**

<b>Twin and earth PVC insulated cable CURRENT CARRYING CAPACITY</b>		
<b>installed in an insulated wall</b>	<b>in conduit or trunking</b>	<b>clipped direct or buried in a non insulated wall</b>
1.5mm <sup>2</sup>	1.5mm <sup>2</sup>	1.5mm <sup>2</sup>
14A	16A	19A
2.5mm <sup>2</sup>	2.5mm <sup>2</sup>	2.5mm <sup>2</sup>
18A	23A	27A
6mm <sup>2</sup>	6mm <sup>2</sup>	6mm <sup>2</sup>
32A	38A	46A
<b>Note: Cable selection is dependent on derating factors</b>		



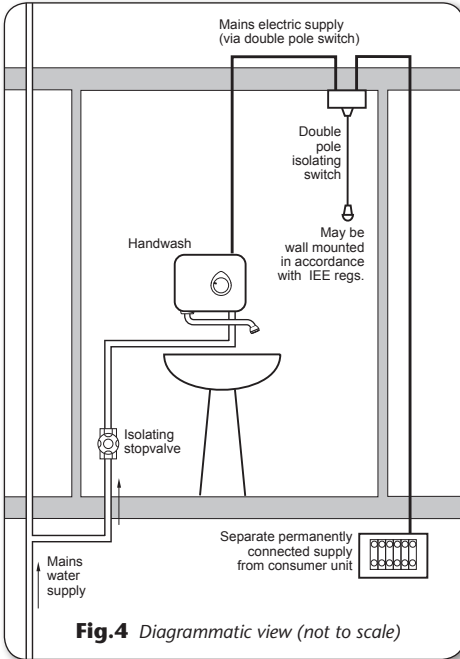

**Fig.4** Diagrammatic view (not to scale)



### WARNING

The handwash **MUST NOT** be positioned where it will be subjected to freezing conditions.

## WATER REQUIREMENTS

The installation must be in accordance with Water Regulations and Bylaws.

To guarantee activation of the heating elements, the unit must be connected to a mains water supply with a minimum running pressure of 100kPa (1.0 bar) at a minimum flow rate of eight litres/minute and a maximum static pressure of 1000kPa (10 bar).

**NOTE:** If the stated flow rates are not available, it may not be possible to achieve optimum performance from the unit throughout the year.

The water supply can be taken from a cold water storage cistern provided there is a minimum head of ten metres above the unit. It must be an independent supply to the handwash unit only.

If it is intended to operate the unit at pressures above the maximum or below the minimum stated, contact Customer Service for advice.

Fig.4 shows a typical system layout for the 7kW rated handwash unit.

**DO NOT** use jointing compounds on any pipe fittings for the installation.

**IMPORTANT!**

This product **MUST ONLY** be connected to Cold water inlet mains pipework.

**IMPORTANT:** The unit must be mounted onto the finished wall surface (on top of the tiles). **DO NOT** tile up to or seal around any part of the unit using silicone sealer after fixing to the wall. Special care must be taken not to block or seal any prd vents on the unit.

## SITING OF THE UNIT

Refer to fig.4 for correct siting of the handwash unit.

### Pressure relief safety device

A pressure relief device (PRD) is designed into the handwash unit which complies with European standards. The PRD provides a level of appliance protection should an excessive build up of pressure occur within the unit.

**DO NOT** operate the handwash with damaged or blocked spray rings which can cause the PRD to operate.



When commissioning, the sprayhead must be removed from the swivel arm or hose, while at the same time the temperature control must be at the minimum flow position. Failure to follow this procedure may also cause the PRD to operate.

Ensure the handwash is positioned over a sink or basin, because if the PRD operates, then water will eject from the bottom of the unit.

Should this happen, turn off the electricity and water supplies to the unit at the isolating switch and stop valve.

Contact Customer Service for advice on replacing the PRD.

**IMPORTANT:** The unit must be mounted on a flat surface which covers the full width and length of the backplate. It is important that the wall surface is flat otherwise difficulty may be encountered when fitting the cover and subsequent operation of the unit may be impaired.

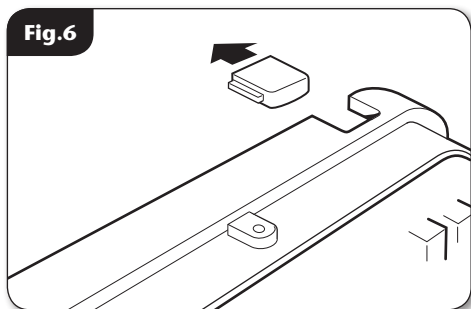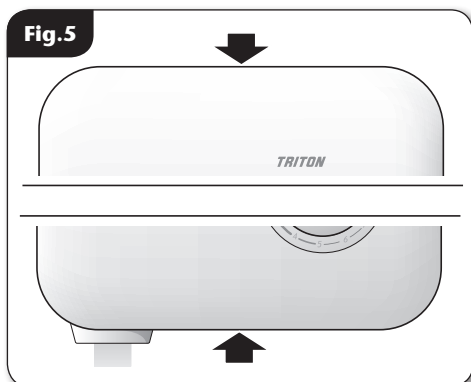

## FITTING THE UNIT TO THE WALL

### WARNING

Check there are no hidden cables or pipes before drilling holes for wall plugs. Use great care when using power tools near water. The use of a residual current device (RCD) is recommended when using power tools.

### Procedure

Unscrew the top and bottom retaining screws (fig.5) and lift the cover from the backplate.

NOTE: The control knob is an integral part of the cover — DO NOT attempt to remove it. Entry position for the mains water is at the bottom only.

Entry position for the mains water is bottom only and entry for electrical supplies are at the top, bottom or back of the unit. If top or bottom entry position is chosen, the relevant cut-out in the backplate must be removed (fig.6).

Position the unit vertically and using the backplate as a template, mark the two fixing holes (fig.7).

Drill and plug the wall. An appropriate drill bit should be used. If the wall is brick, plasterboard or a soft building block, appropriate wall plugs and screws should be fitted.

Screw top fixing screw into position leaving the base of the screw head protruding 6mm out from the wall. Hook the backplate over the top screw and fit the bottom fixing screw into position.

**DO NOT** fully tighten the screws at this stage, as the fixing holes are elongated to allow for out of square adjustment after the plumbing connections have been completed.

**IMPORTANT:** Using a suitable sealant, always seal around the incoming pipework to prevent water entering the wall.

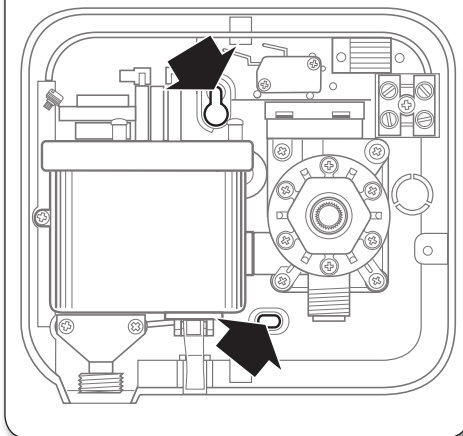
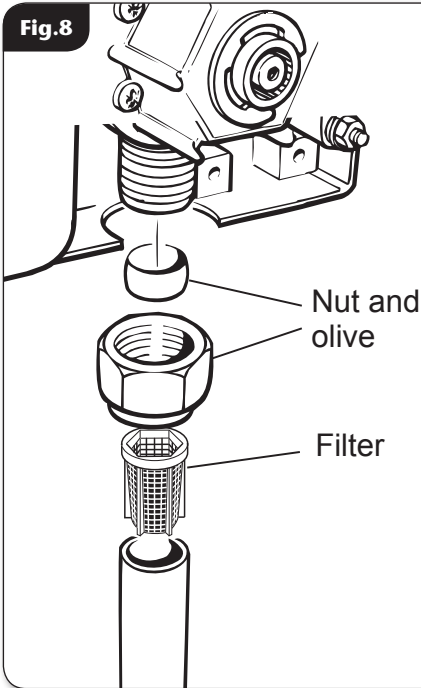
**Fig.7**

Fig.8

**WARNING!**

THE OUTLET OF THE UNIT ACTS AS A VENT,  
AND MUST NOT BE RESTRICTED.

ONLY the swivel arm and sprayhead  
assembly supplied should be attached  
to the units outlet.

DO NOT CONNECT A TAP, HOSE SET, OR  
ANY OTHER FITTING TO THE OUTLET.

## PLUMBING CONNECTIONS

Plumbing to be carried out before wiring.

DO NOT use jointing compounds on any pipe fittings for the installation.

DO NOT use soldered fittings near the unit as heat can transfer along the pipework and can damage components.

NOTE: An additional isolating valve (complying with Water Regulations/Bylaws) MUST be fitted in the mains water supply to the unit as an independent means of isolating the water supply should maintenance or servicing be necessary. If this isolator is fitted in a loft space, the loft must have a fixed access ladder and be boarded, with appropriate lighting from the access point to the isolator.

### IMPORTANT!

The water inlet pipework to the handwash MUST be flushed before the unit is fitted. This is to remove any debris within the inlet pipework.

### Procedure

Turn off the water supply either at the mains stop valve or the isolating stop valve.

Connect the mains water supply to the inlet of the unit via 15mm pipe using the nut and olive supplied (fig.8). Make sure the filter is inserted in the pipe before connection. This helps to prevent ingress of debris.

Check the backplate is square on the wall and then tighten the two retaining screws which hold it to the wall.

Turn on the mains water supply and check for leaks in the pipework connection to the unit.

## ELECTRICAL CONNECTIONS

SWITCH OFF THE ELECTRICITY SUPPLY AT THE MAINS.

Fig.9 shows the 3kW unit and 7kW unit schematic wiring diagrams.

The cable can be surface clipped, hidden or via 20mm conduit. For the 3kW handwash unit the minimum cable size will be 1.5mm<sup>2</sup> and for the 7kW unit the minimum will be 6mm<sup>2</sup>.

NOTE: The supply cable earth conductor must be sleeved. The outer sheath of the supply cable must be stripped back to the minimum.

NOTE: For top cable entry, remove sufficient outer sheath to assist routing beneath and looping back into the terminal block. DO NOT remove too much outer sheath. NOTE: Conduit entry can only be from rear. Route the cable into the unit and connect to the terminal block (fig.10) as follows:

Earth cable to terminal marked E 

Neutral cable to terminal marked N



Live cable to terminal marked L

**IMPORTANT:** When connecting the cable fully tighten the terminal block screws and make sure that no cable insulation is trapped under the screws. Loose connections can result in cable overheating. Make sure the cable is fully secured by the cable clamp provided. If top entry is used, move the cable clamp from its position at the bottom entry position to the top entry position.

The use of connections within the unit, or other points in the circuit, to supply power to other equipment i.e. extractor fans, pumps etc. will invalidate the guarantee.

DO NOT switch on the electricity supply until the cover has been fitted and the **unit commissioned**.

1. Terminal block
2. Thermal cut-out
3. Microswitch
4. Element

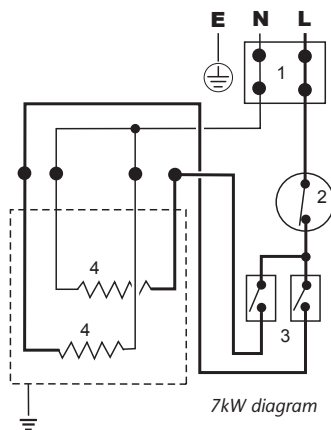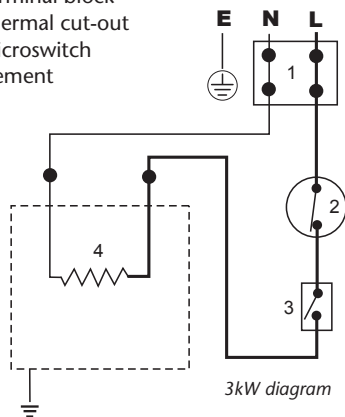

**Fig.9**

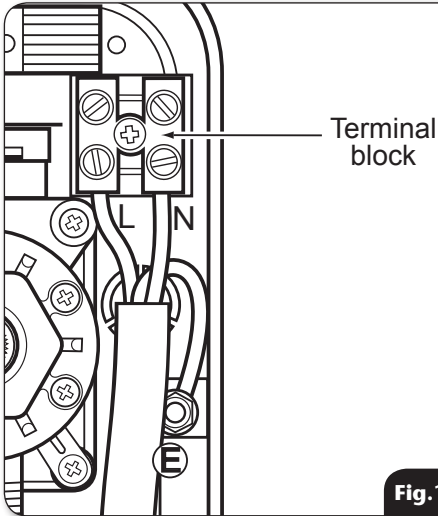



Fig.10

## REPLACING THE COVER

To ensure that the temperature control is correctly positioned on the stabiliser valve, temporarily place the cover in position so that the splines engage and rotate the temperature control fully clockwise.


Remove the cover and position the temperature control so that it points at the  position (fig.11).

Replace the cover squarely to the backplate and guide into position so that the control locates correctly into the splined spindle. Should any difficulty arise, recheck the points above.

Secure the cover in position with the two retaining screws.

DO NOT switch on the electricity supply to the unit until the commissioning procedure has been carried out.

Fig.11

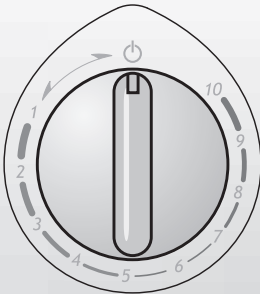

## SWIVEL ARM FITTING

Screw the swivel arm connector onto the outlet pipe (fig.12).

NOTE: It is advisable to apply PTFE tape to the threads of the outlet pipe prior to fitting the swivel arm in order to provide a watertight seal.




**WARNING**



### COVER RETAINING SCREWS

ONLY the SUPPLIED SCREWS should be used. The use of non supplied screws WILL invalidate product specifications & warranty.

Fig.12

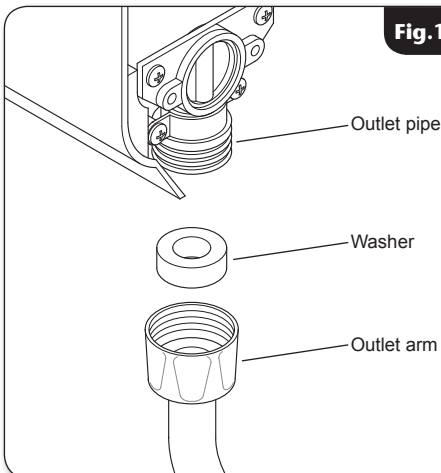

## COMMISSIONING

**WARNING**

Before normal operation of the handwash, it is essential the following commissioning procedure is completed correctly.


The first operation of the unit is intended to flush out any unit debris and to ensure the heater unit contains water before the elements are switched on.



- Make sure that the electricity is switched OFF at the isolating switch.
- Make sure the cold mains water supply is turned OFF at the units isolating valve and that the swivel arm is directed to waste.
- Make sure that the swivel arm is screwed to the outlet pipe but DO NOT attach the sprayhead to the arm.
- Rotate the temperature control fully anti-clockwise to '10' – the minimum flow position (fig.13).

PLEASE NOTE: Leaving the control at any position other than '10' may cause the PRD to operate.

- Turn the water supply back on at the isolating valve.
- Wait until water starts to flow from the swivel arm, then rotate control fully clockwise to '1' – the maximum flow position (fig.14).

It will take about thirty seconds for a smooth flow of water to be obtained when air and any debris is being dispersed from the unit. When a smooth flow of water is obtained, rotate the control from '1' to '10' and back again several times to release any trapped air.


- Once flushing out has been completed, stop the water flow by rotating the control to the  position.
- Fit the sprayhead to the swivel arm. Switch on the electricity supply to the handwash at the isolating switch.
- The unit is now ready for normal operation.

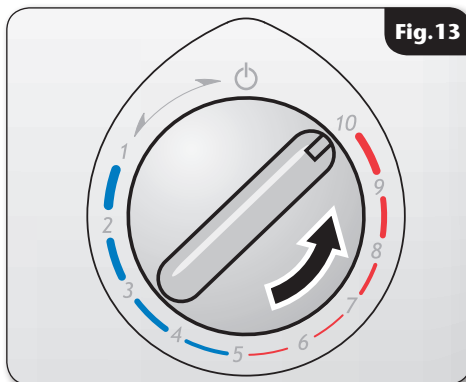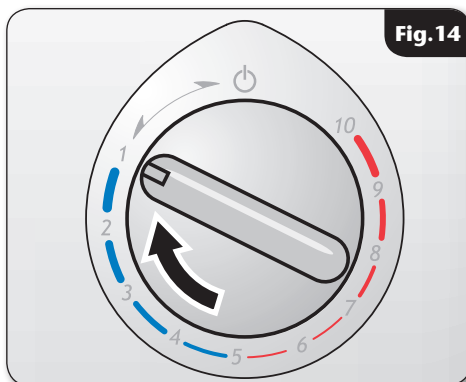**Fig.13****Fig.14****PLEASE NOTE!**

This unit does NOT need the power supply to be turned on for cold mains water to be able to flow through it.



Fig.15

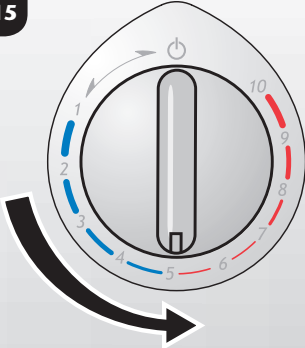

## OPERATING THE UNIT

To start the handwash unit

Turn the temperature control anti-clockwise and the water will begin to flow.

The flow of water is controlled by the combined start/stop temperature control.

To obtain warm water turn the control slowly anti-clockwise to the mid position (fig.15).

If the water is too hot, turn the control slowly clockwise towards the lower numbers (fig.16).

If the water is too cool, turn the control slowly anti-clockwise towards the higher numbers (fig.17).

NOTE: There will always be a short time delay between selecting a flow rate and reaching the stable temperature for that flow rate.

To stop the handwash unit


Turn the temperature control fully clockwise to the  position, and water will cease to flow.

Fig.16


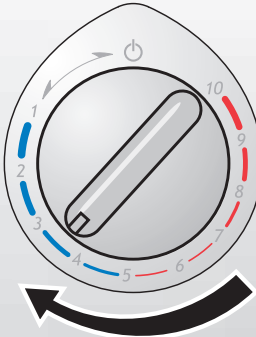


Fig.17

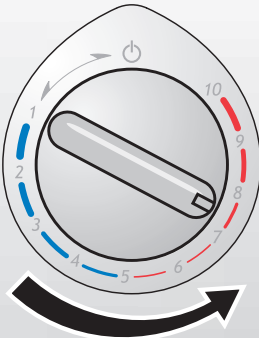

### WARNING

If restarting immediately after stopping, be aware that a slug of hot water will be expelled for the first few seconds.

**Note:** In normal use, it is in order to leave the water supply permanently on to the handwash unit, but as with most electrical appliances, **the unit must be switched off at the isolating switch when not in use.**

## OPERATING FUNCTIONS

### Low water pressure cut-out

If the water pressure falls below the minimum required for correct operation of the unit, power will be switched off to the heating elements preventing any maintained temperature rises (water will continue to flow).

Power will automatically be restored when adequate water pressure returns.

### Safety cut-out

The unit is fitted with a non-resettable thermal cut-out safety device. In the event of abnormal operation which could cause unsafe temperatures within the unit, the device will disconnect the heating elements. It will require a visit from a qualified engineer to determine the nature of the fault and replace the safety device once the unit has been repaired.

### WARNING!

After any servicing of the mains water supply, always make sure the unit is run with no power supplied to it.

Please see page 16  
Commissioning for details.

**WARNING!**

DO NOT use 'powerful' abrasive or solvent cleaning fluids when cleaning the handwash as they may damage the plastic fittings.

**CLEANING**

Before cleaning, turn off the unit at the isolation switch to avoid the handwash being accidentally switched on.

**Cleaning the sprayhead and rings**

The sprayhead is a critical part of the unit and has been designed to give the maximum performance.

**IMPORTANT:** Triton sprayheads **ONLY** are to be used with this product.

In order to maintain the performance from the handwash, the spray rings should be cleaned at regular intervals to prevent build up of deposits from the water supply.

When first installed it may be required to clean the spray rings due to debris that may be left in the pipework after installation, especially if the commissioning procedure has not been carried out. Once this initial debris is cleared, the frequency of cleaning will depend upon the type of water available.


Hard water areas may require cleaning once a week whereas soft water areas may only require cleaning every six months.

**NOTE:** Blocked spray rings can reduce the water flow to such an extent that it will cause the thermal cut-out or PRD to operate.

**Procedure**


Unscrew the complete sprayhead assembly from the swivel arm (fig.18). Remove the retaining screw and withdraw the spray rings (fig.18). Clean with a suitable brush, ensuring all traces of scale are removed from the spray ring grooves. Rinse in clean water and refit the assembly.

**NOTE:** The swivel arm has the option of being fitted with a trim only. If required, unscrew the sprayhead assembly and push the trim onto the threaded portion of the arm.

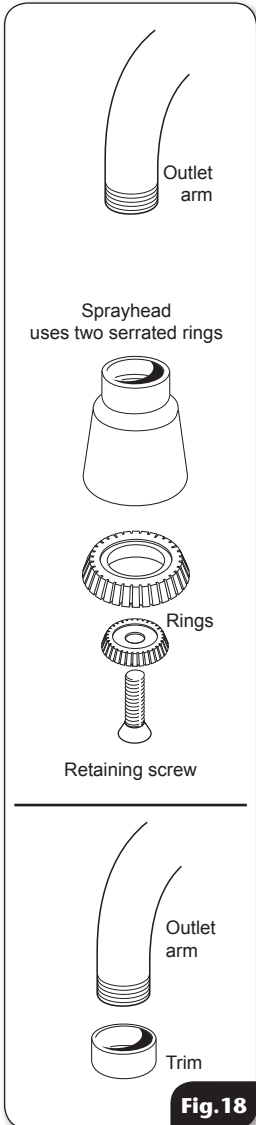

## SPARE PARTS

Ref. Description	Part No.
1. Cover assembly.....	81200120
2. Heater can assembly	
3kW.....	P84500010
7kW.....	P84500020
3. Stabilising valve assembly	
3kW.....	82600730
7kW.....	82600720
4. Thermal cut-out.....	22010010
5. Terminal block & wires	
3kW.....	82201040
7kW.....	82201030
6. Pressure Relief Device (PRD)....	83301330
7. Outlet pipe .....	7054453
8. Swivel arm assembly (200mm)	
3kW/7kW .....	82700090
- 300mm swivel arm .....	82700100
9. Sprayhead assembly .....	83302080
10. Top Pipe Trim .....	7055030
11. Bottom Pipe Trim.....	7055031
- Switch and wire kit (not shown)	
3kW/7kW .....	82301390
- Filter (not shown) .....	7052161

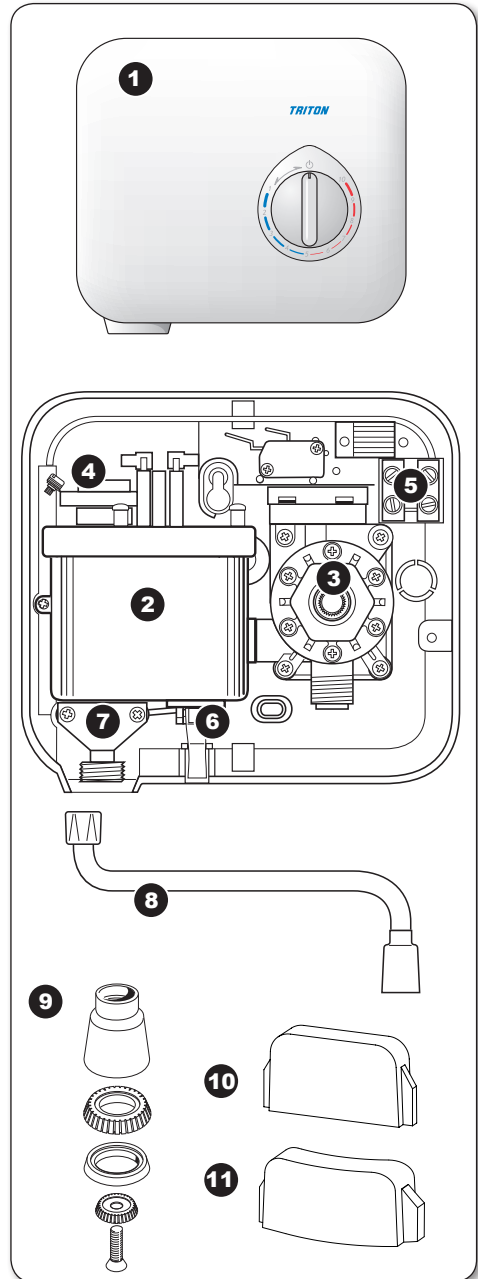

## FAULT FINDING

**IMPORTANT:** Switch OFF the electricity at the mains supply and remove the circuit fuse before removing the cover from the handwash while attempting any fault finding inside the unit.

Problem/Symptom	Cause	Action/Cure
1 Unit inoperable, no water flow.	1.1 No mains water supply to unit.	1.1.1 Check if isolating valves are fully open. Check if a blockage in inlet filter or in pipework.
	1.2 Unit malfunction.	1.2.1 Have unit checked. Ring Customer Service.
2 Water too hot.	2.1 Not enough water flowing through the unit.	2.1.1 Increase the flow rate. 2.1.2 Blocked sprayhead - clean or replace blocked spray rings.
	2.2 Blockage in supply.	2.2.1 Check if stop valves are fully open. Check if blockage in inlet filter.
	2.3 Increase in ambient water temperature.	2.3.1 Increase the flow rate.
3 Water temperature cycling hot/cold at intervals.	3.1 Heater cycling on thermal cut- out.	3.1.1 See 'Water too hot' causes 2.1, 2.2 and 2.3 and their appropriate action/cures. If it continues, contact Customer Service.
4 Water too cool or cold.	4.1 Too much flow.	4.1.1 Reduce the flow rate.
	4.2 Water pressure below minimum stated on rating label	4.2.1 Is water supply mains or tank fed ?
		4.2.2 If tank fed, replumb to mains water supply or see 4.2.4.
		4.2.3 If mains fed, ensure that mains stop valve is fully open and that there are no other restrictions in the supply while the unit is in use, or see 4.2.4.
		4.2.4 Fit a pump to give minimum pressure. Contact Customer Service for advice.
	4.3 Reduction in ambient water temperature.	4.3.1 Reduce the flow rate.
	4.4 Electrical malfunction.	4.4.1 Have unit checked by suitably qualified electrician or contact Triton Customer Service.
	4.5 Interrupted power supply.	4.5.1 Blown fuse or circuit breaker. Check supply. Renew or reset fuse or circuit breaker. If it fails again, consult a qualified electrician.
		4.5.2 Power cut. Check other appliances and if necessary, contact local Electricity Supply Company.

## FAULT FINDING

Problem/Symptom	Cause	Action/Cure
5 Unit varies from normal temperature to cold during use.	5.1 Water pressure has dropped below minimum required	5.1.1 Wait until the water pressure resumes to normal.
6 Pressure relief device has operated (water ejected from PRD tube).	6.1 Blocked sprayhead.	6.1.1 Clean or replace blocked spray rings in the sprayhead and then fit new PRD.

Note: Identify cause of operation before fitting new PRD unit.  
When fitting a new PRD, follow the commissioning procedure.  
It is advised all electrical maintenance/repairs to the handwash unit  
should be carried out by a suitably qualified person.

# Entry Points


## Diagram Key:



**Water** Entry Points



**Cable** Entry Points

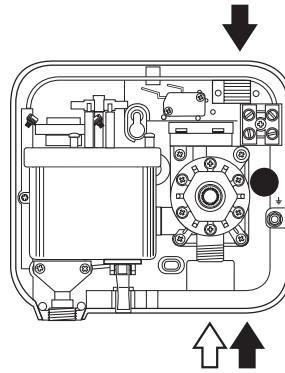

## WEEE Directive – Policy Statement

As a producer and a supplier of electric showers, Triton Showers is committed to the protection of the environment via our own environmental policy and the compliance with the **WEEE directive**.

Triton Showers is fully registered with the Environment Agency under the following schemes:

Repic: Producers take-back scheme (PTS), registration number WEE/EJ3466QV

Valpak: Distributor take-back scheme (DTS), registration number 9659

All our electric products are labelled accordingly with the crossed out wheeled bin symbol. This indicates, for disposal purposes at end of life, that these products must be taken to a recognised collection points, such as local authority sites/local recycling centres; this will be free of any charges. **Do not return to Triton Showers.**



## UK SERVICE POLICY

**In the event of a product fault or complaint occurring, the following procedure should be followed:**

### **DO NOT REMOVE THE PRODUCT**

1. Telephone Customer Service on **024 7637 2222** having available your details including post code, the model number and power rating of the product, together with the date of purchase and, where applicable, details of the particular fault.
2. If required, the Customer Service Advisor will arrange for a qualified engineer to call.
3. All products attended to by a Triton service engineer must be installed in full accordance with the Triton installation guide applicable to the product. Every product pack contains an installation guide, however, they can also be downloaded free at [www.tritonshowers.co.uk](http://www.tritonshowers.co.uk).
4. Our engineer will require local parking and if a permit is required, this must be available to the engineer on arrival at the call.
5. If loft access is required for isolation or to complete a repair, the loft must have a fixed access ladder and be boarded, with appropriate lighting from the access point to and around the repair area.
6. It is essential that you or an appointed representative, who must be over 18 years of age, is present for the duration of the service engineer's visit. If the product is in guarantee you must produce proof of purchase.
7. Where a call under the terms of guarantee has been booked and the failure is not product related (i.e. scaling and furring, incorrect water pressure, pressure relief device operation or electrical/plumbing installation fault) a charge will be made. A charge will also be issued if nobody is at the property when the service engineer calls or adequate parking/permit is not available.
8. If the product is no longer covered by the guarantee an up-front fixed fee will be charged before the site visit.
9. Your receipt must be retained as proof of purchase. Should proof of purchase not be available on an 'in-guarantee' call, or should the service engineer find that the product is no longer under guarantee, the engineer will charge the same fixed price and will request payment prior to departing. If payment is not made on the day an administration charge will be added to the fixed charge.
10. If a debt is outstanding from a previous visit, or from any other Triton purchase, Triton reserves the right to withhold service until the debt has been settled.
11. Triton takes the health, safety and wellbeing of its employees very seriously and expects customers to treat all staff members with respect. Should any employee feel threatened or receive abuse, either verbally or physically, Triton reserves the right to withhold service.

### **Replacement Parts Policy**

In line with AMDEA guidelines, Triton retains functional spares for as long as there is a market for them and in most cases, well beyond. Due to the vast array of product types, the life cycle of products can vary and therefore so can the length of time parts can be supplied. Spare parts can be ordered via our online spare parts store or by telephoning Triton Customer Service Spares Department on **024 7637 2222**. Payment should be made by credit / debit card (excluding American Express or Diners Card). Payment can also be made by pre-payment of a pro-forma invoice, by cheque or postal order.

**Telephone orders are based on information given during the call. Before contacting Triton, please verify your requirements using the Triton website or your professional installer. Triton cannot accept liability for incorrect part identification.**

Triton Showers  
Triton Road  
Nuneaton  
Warwickshire, CV11 4NR

Triton is a division of Norcros Group (Holdings) Limited

Triton reserve the right to change product specification without prior notice. E&OE. © TRITON SHOWERS 2019

## TRITON STANDARD GUARANTEE

With the exception of accessories, Triton guarantee the product against all manufacturing defects for a period of **1 years** (for domestic use only) from the date of purchase, provided that it has been installed by a competent person in full accordance with the fitting instructions.

All accessories such as shower heads, hoses and riser rails carry a **1 year** parts only guarantee against manufacturing defects.

Any part found to be defective during this guarantee period we undertake to repair or replace at our option without charge, so long as it has been properly maintained and operated in accordance with the operating instructions and has not been subject to misuse or damage. This product must not be taken apart, modified or repaired except by a person authorised by Triton. This guarantee applies only to products installed within the United Kingdom and does not apply to products used commercially. This guarantee does not affect your statutory rights.

### **What is not covered:**

1. Breakdown due to:
  - a) use other than domestic use by the property occupants;
  - b) wilful act or neglect;
  - c) any malfunction resulting from the incorrect use or quality of electricity, gas or water or incorrect setting of controls;
  - d) failure to install in accordance with this installation guide.
2. Claims for missing parts once the product has been installed.
3. Repair costs for damage caused by foreign objects or substances.
4. Total loss of the product due to non-availability of parts.
5. Compensation for loss of use of the product or consequential loss of any kind.
6. Call out charges due to an abortive visit or where no fault has been found with the appliance.
7. The cost of repair or replacement of isolating switches, electrical cable, fuses and/or circuit breakers or any other accessories installed at the same time. Replacement of the Pressure Relief Device that only activates when the shower outlet is blocked is also excluded.
8. The cost of routine maintenance, adjustments, overhaul modifications or loss or damage arising therefrom, including the cost of repairing damage, breakdown, malfunction caused by corrosion, furring, frost or exposure to freezing conditions.
9. Callout charges where the water supply cannot be isolated, this includes consequential losses arising from unserviceable supply valves, or inaccessible product or valves located in a loft space without suitable access.

**For the latest Terms & Conditions please see:**

**[www.tritonshowers.co.uk/terms](http://www.tritonshowers.co.uk/terms)**

Customer Service: 024 7637 2222  
Trade Installer Hotline: 024 7637 8344

[www.tritonshowers.co.uk](http://www.tritonshowers.co.uk)  
E-mail: [serviceenquiries@tritonshowers.co.uk](mailto:serviceenquiries@tritonshowers.co.uk)  
E-mail: [technical@tritonshowers.co.uk](mailto:technical@tritonshowers.co.uk)